

INSTALLATION INSTRUCTIONS

1908-604 Weatherproof Switch (4-Way)

Part Number: 11908000603

Wiring this switch, or any other improperly, can result in electrical shock, fire, and/or death. Installer must follow all local building codes and laws for electrical installations.

AC Voltage may cause electrical shock or burn. Turn off power at breaker before installing.

DIRECTIONS


- 1. Snap switch into brack. Fill conduit around wires with sealant.
- 2. Connect ground wire to green screw on bracket.
- 3. Connect wires to switch using 1/4" spade connectors.
- Mount to junction box using two #6 x 3/4" pan head screw.
 Note: Recessed type junction box with minimum depth of 2-1/8" required.
- Install the cover plate with #6-32 x 3/4" oval head screws. Open holes in cover plate using 1/8" drill or sharp tool.


SPECIFICATIONS

- Rating
 - 20 A @ 120 VAC General Use
 - 5 A @ 125 VAC Tungsten
 - 5 A @ 250 VAC Ballasted
 - 4.9 A @ 125 VAC Electronic Ballast
- Circuit
 - Switch: DPDT
 - Indicator: "ON", when switch is "OFF", "NIGHTLIGHT"
- UL Recognized

WIRING DIAGRAM

- Note: Connect only copper or copper clad wire to this device!
- "NIGHTLIGHT" Indicator
 - Indicator in the 1908-603 will light when load is "ON"/1908-604 will be "OFF"
 - Indicator in the 1908-603 will not light when load is "OFF"/1908-604 will be "ON"

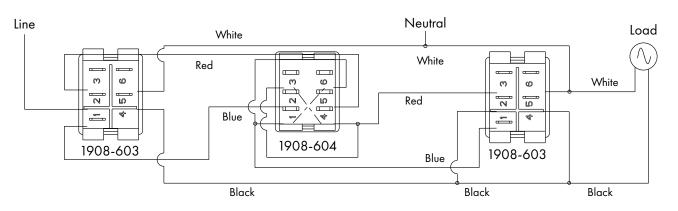

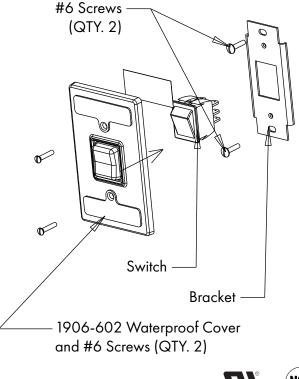



Part No.	Description
11908000604	Weatherproof Rocker Switch, 4-Way