


1820U/UB Adjustable LED High Bay Fixture

Part Number: 11820U00004/11820UB0004

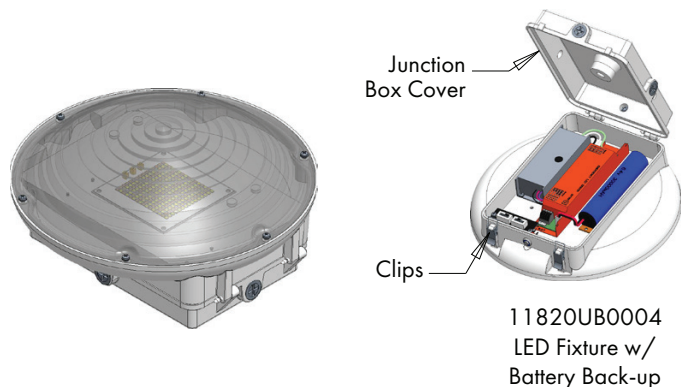

⚠ WARNING (Risk of Shock)


- Turn off breaker
- Electrician is required for install
- All wiring must comply to NEC and local electrical codes

⚠ WARNING (Risk of Fire)

- Follow all local and federal guidelines for disposing of lithium batteries
- Do not dispose of the battery in general trash or recycling, as it can be explosive if punctured, heated, or mishandled

DIRECTIONS

1. Open fixture by releasing the two clips.
2. Disconnect the ground wire from the junction box cover, then slide the cover aside to detach the fixture.
3. Measure the location and secure the junction box cover to the ceiling. The fixture includes an option for pole mounting if required.
4. Feed the wire into the junction box cover through any available conduit opening.
5. Hang the fixture on junction box cover and reconnect ground.
6. Use the supplied lever connectors to install the wiring. Lift the lever to release the wire and snap it down to secure it in place.
 - 120-277 VA:
 - Line = Black/Brown
 - Neutral = White/Blue
 - Ground = Green
7. Adjust the wattage output and color temperature using the small switches located inside the junction box.
 - 1820U:** [SW1] WATTAGE = 40 W - 60 W - 70 W
 - 1820UB:** [SW1] WATTAGE = 21 W - 30 W - 40 W
 - BOTH:** [SW2] COLOR 3000K (WARM) - 4000K (NATURAL) - 5000K (COLD)
8. Connect 0-10 V dimmer: dimmer switch required (Not Included)
 - Purple:** 0-10 V signal from dimmer switch
 - Pink:** 12 V Aux (-) power for dimmer switch
 - Black:** 12 V Aux (+) power for dimmer switch

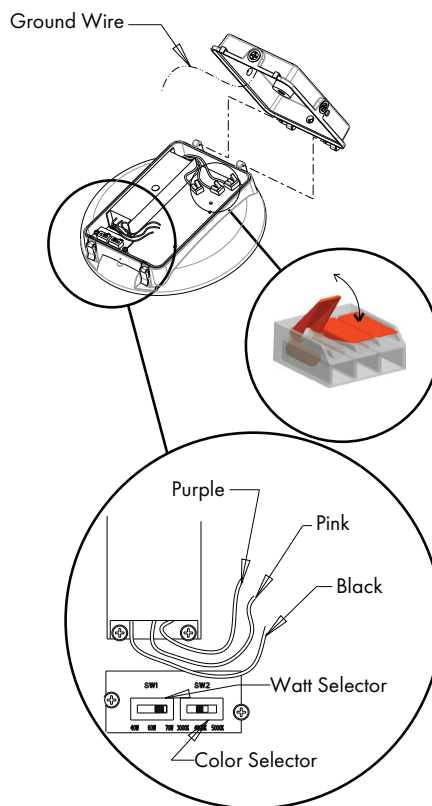

9. If installing the 1820UB battery unit, plug in the battery before restoring power. Allow several hours for the battery to charge before pressing the test button on the side. The test button should be tested monthly.
10. Close and snap clips to seal. Turn on power. Test fixture to verify operation.

[Click here](#) for 1820U/UB video installation.

TROUBLESHOOTING

- NO LIGHT
 - Check input power, loose connections
 - Change the wattage levels to determine if the switch is faulty
 - Toggle between color temperature settings to check if the LED is functioning properly
- DIM LIGHT
 - Switch between color temp and wattage level
- DIFFERENT COLOR
 - Switch between different color temperatures


TROUBLESHOOTING (Battery)

- TEST BUTTON DOESN'T WORK
 - Ensure the battery is properly connected and charged. If necessary, allow more time for charging or replace the battery




1820U/UB Adjustable LED High Bay Fixture

Part Number: 11820U00004/11820UB0004

MOUNT DIMENSIONS

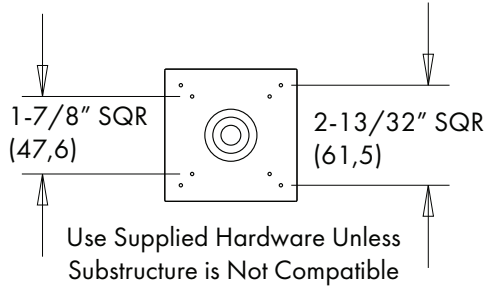

FIXTURE DIMENSIONS

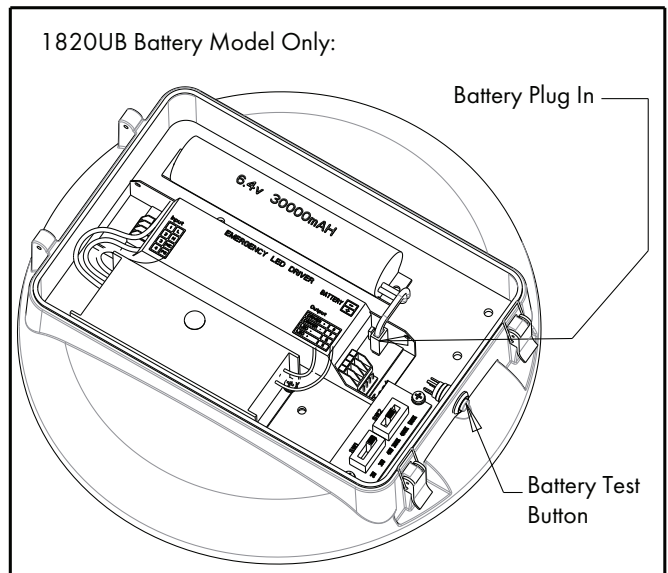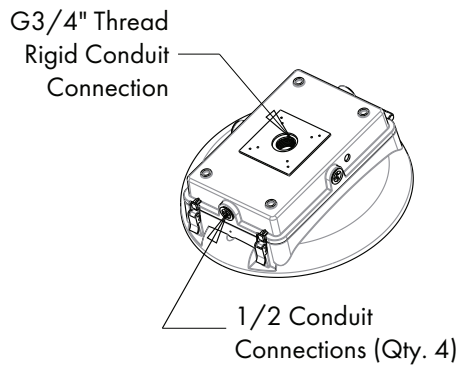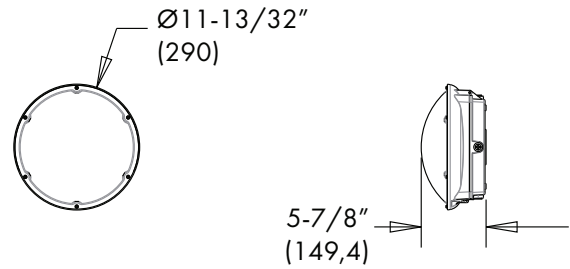

Optional:
1901A Motion Sensor
(Sold Separately)

