

## 1908-604 Weatherproof Switch (4-Way)

Part Number: 11908000603

### ⚠ CAUTION

Wiring this switch, or any other improperly, can result in electrical shock, fire, and/or death. Installer must follow all local building codes and laws for electrical installations.


AC Voltage may cause electrical shock or burn. Turn off power at breaker before installing.

### DIRECTIONS

1. Snap switch into brack. Fill conduit around wires with sealant.
2. Connect ground wire to green screw on bracket.
3. Connect wires to switch using 1/4" spade connectors.
4. Mount to junction box using two #6 x 3/4" pan head screw.  
**Note:** Recessed type junction box with minimum depth of 2-1/8" required.
5. Install the cover plate with #6-32 x 3/4" oval head screws.  
Open holes in cover plate using 1/8" drill or sharp tool.

### SPECIFICATIONS

- Rating
  - 20 A @ 120 VAC General Use
  - 5 A @ 125 VAC Tungsten
  - 5 A @ 250 VAC Ballasted
  - 4.9 A @ 125 VAC Electronic Ballast
- Circuit
  - Switch: DPDT
  - Indicator: "ON", when switch is "OFF", "NIGHTLIGHT"
- UL Recognized

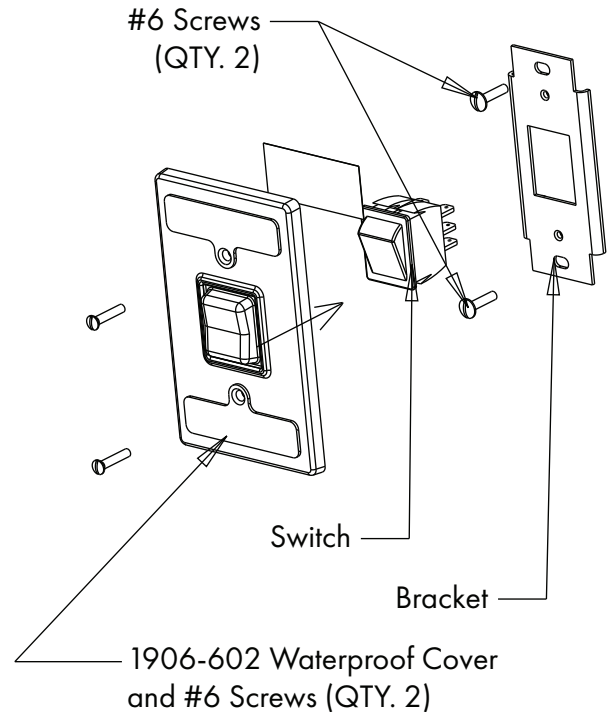

Part No.	Description
11908000604	Weatherproof Rocker Switch, 4-Way

### WIRING DIAGRAM

- **Note:** Connect only copper or copper clad wire to this device!
- "NIGHTLIGHT" Indicator
  - Indicator in the 1908-603 will light when load is "ON"/1908-604 will be "OFF"
  - Indicator in the 1908-603 will not light when load is "OFF"/1908-604 will be "ON"

