


## 1238CQ Pacesetter Locking Handle QTL

Part Number: 11238CQ0004/5

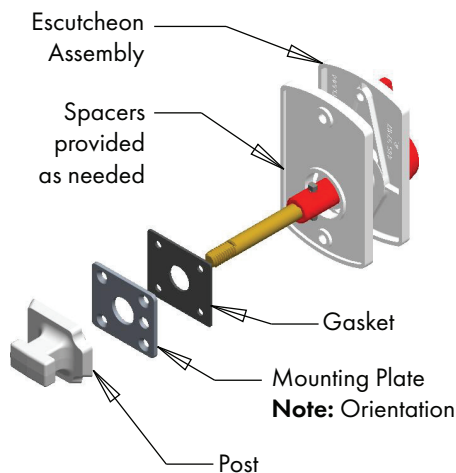

1. Mount handle on the door with the front mounting hole 2-7/32" from the edge as shown in the figure below.
2. With the door closed, measure over from the front mounting hole in the handle and drill a  $\varnothing 3/8$ " through the jamb, then enlarge the hole to  $\varnothing 13/16$ " x 7/8" deep on the inside of the jamb. Enlarge the hole to  $\varnothing 5/8$ " x 1/4" deep on the outside.
3. Insert rod through hole and tighten to bring the strike (post, mounting plate, and gasket) snug against the jamb.
4. Check function.

### Right Hand (RH) Door

