



Removable Cylinder

4012/4162 for Illinois Lock Model No. L 729-510-125 Cylinder



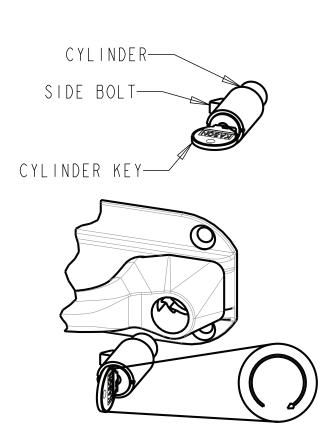

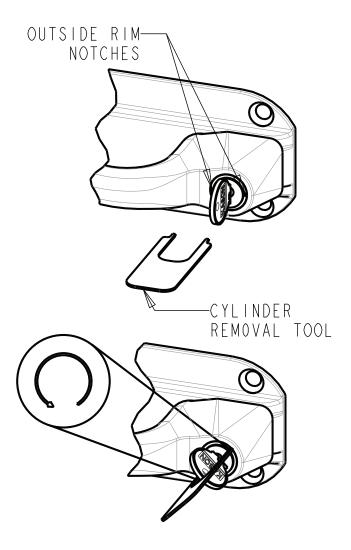

INSTALLATION OF REMOVABLE CYLINDER INTO HANDLE

- 1. Rotate key 90° clockwise.
- 2. Press side bolt in, flush with body of lock cylinder.
- 3. Push cylinder fully into handle with side bolt towards the handle until cylider bottoms out.
- 4. When cylinder bottoms out, rotate slightly until the side bolt engages with the slot inside the handle so the cylinder no longer rotates.
- 5. Remove key.

REMOVAL OF THE CYLINDER

- 1. Rotate the key 90° clockwise as if you were unlocking the handle and hold key in that position.
- 2. Push cylinder into the handle, holding the key at 90°.
- 3. With your other hand, insert removal tool into notches on outside rim of lock cylinder.
- 4. While maintaining slight pressure on key to keep it rotated, rotate the lock cylinder and removal tool 90° in the counter-clockwise direction.
- 5. The spring inside the handle will push the lock cylinder the remaining way out of the handle.
- 6. Remove the lock cylinder by hand.