

## 5688 SafeGuard® Two-Point Latch with 0488 Vertical Push Bar Inside Release

Part Number: 15688\*

*Part No.	Offset	Dim "X"
15688CL3004	-1/8 to 1/4 (-3.2 to 6.4 mm)	30
15688CL3604	-1/8 to 1/4 (-3.2 to 6.4 mm)	36
15688L36004	-1/8 to 1/4 (-3.2 to 6.4 mm)	36
15688L50020	3/4 to 1-1/2 (19.1 to 38.1 mm)	50

Additional models available upon request. See step 1 for Dim "X".



**CAUTION**



DO NOT LOCK THE LATCH BEFORE CLOSING.  
THE DOOR LATCH COULD BECOME DAMAGED.

**WARNING**








ENTRAPMENT AND FREEZE HAZARD

For safe operation, only use with Kason model 0488AG inside release. See [inside release instructions](#) for more details.

Failure to follow the installation and testing procedures may result in personnel being entrapped and subject to extreme cold, freezing temperature and possibly death. See page 2 for testing procedures.

\*VERTICAL PLACEMENT DETERMINED BY INSTALLER

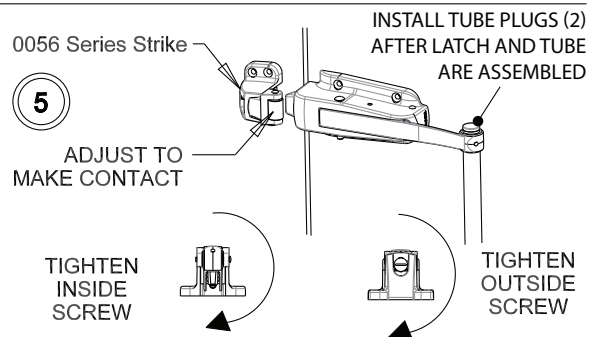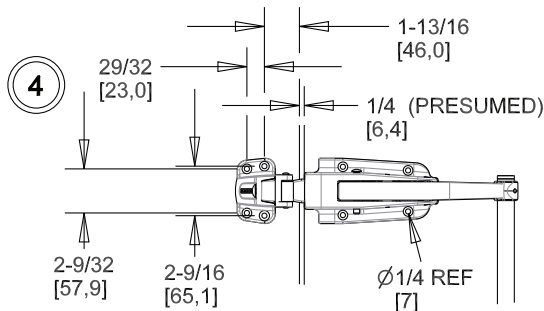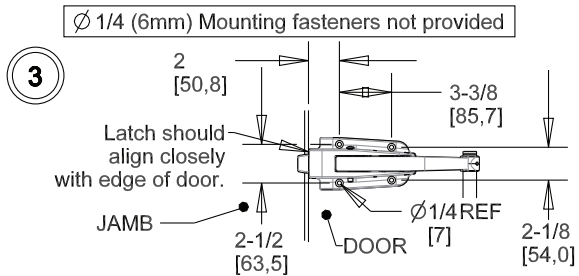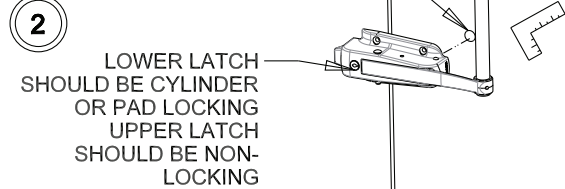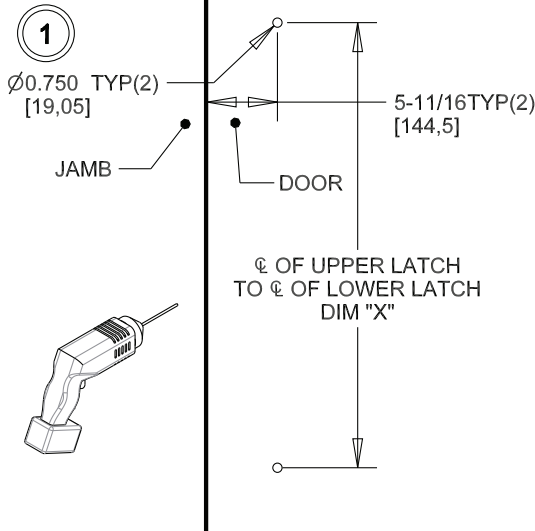

## 5688 SafeGuard® Two-Point Latch with 0488 Vertical Push Bar Inside Release

Part Number: 15688\*


### CAUTION




DO NOT LOCK THE LATCH BEFORE CLOSING.  
THE DOOR LATCH COULD BECOME DAMAGED.



1. CLOSE DOOR

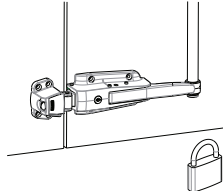

2. LOCK LATCH

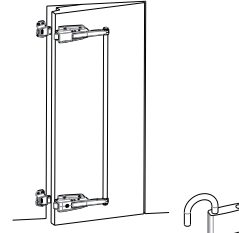

3. UNLOCK LATCH  
4. OPEN DOOR  
5. LEAVE THE LATCH UNLOCKED

### WARNING




#### ENTRAPMENT AND FREEZE HAZARD

Failure to follow the installation and testing procedures may result in personnel being entrapped and subject to extreme cold, freezing temperatures, and possibly death.

Affix the safety decal, that came with the latch, to the door near the latch or the inside release.


The door hardware includes a SafeGuard® latch, which is designed with an inside release that will operate the latch to open the door from the inside, when the latch has been locked on the outside. Extreme or harsh use conditions of the latch, inside release or walk-in door, may damage or impair function of the latch. For this reason, it is important to inspect and test the function of the latch and inside release daily before entering the walk-in. Should the latch or inside release fail to release the latch and allow door to open from the inside, do not enter the walk-in and report the problem to management so that the door, latch or inside release may be serviced by a professional.

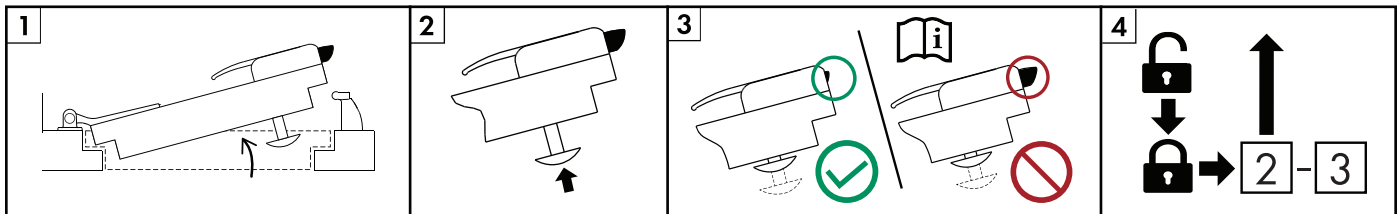

### TESTING PROCEDURE

1. Open the door.
2. With the door open, push to depress the inside release knob (or push bar).
3. (A) If the latch tongue retracts substantially into the latch with the release knob depressed, the latch and inside release are functioning properly.
3. (B) If the latch tongue does not retract substantially into the latch, do not enter the walk-in, and notify management to have the door serviced.
4. Lock the door using key cylinder and/or padlock and repeat steps 2 and 3.

**Note:** After passing the step 4 test with latch locked, unlock the latch and continue with normal use of the door.

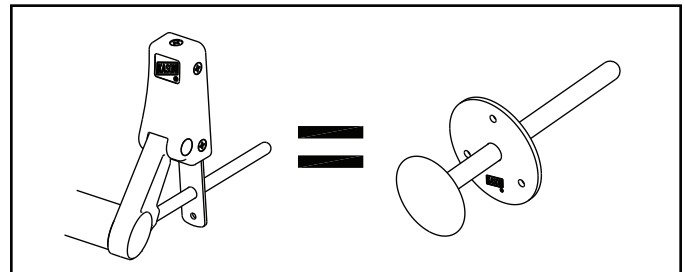

**Note:** Actual latch or inside release provided with the door may look different than those shown in testing diagram above. Refer to instructions and safety decal provided with your latch.